# Owner's Manual

## SUPDU001

*Wiring Instructions*

UL1788 Listed
UPS Accessory

1111 W. 35th Street • Chicago, IL 60609 USA
Customer Support: (773) 869-1234 • www.tripplite.com

## Connecting an SUPDU001 to the Output of a SmartOnline™ SU6K, SU10K, SU6000RT3U or SU10KRT3U

### Important Safety Instructions! Save These Instructions!

**WARNING!** Before connection, make sure that your entire SmartOnline system is OFF (including transformer modules, where applicable), that all input and output breakers are switched OFF and that the system is not connected to AC power. (See SmartOnline Owner's Manual.)

**WARNING!** SUPDU001 installation and wiring should only be made by a qualified electrician observing all applicable local, state and national electrical codes and requirements.

- Remove screws and open SUPDU001 case.
- Remove any one of the eight knockouts (either ½ or ¾ inch) around the edge of SUPDU001 case. Attach a user-supplied conduit connector.
- Attach a second user-supplied conduit connector to the terminal box cover of the SmartOnline UPS System.
- Connect user-supplied flexible, armored-cable conduit between the SUPDU001 and the SmartOnline UPS System terminal box.
- Run user-supplied wire through the conduit and make appropriate connections inside the SUPDU001 and inside the SmartOnline UPS System terminal box.
- Connect the colored wires to the SmartOnline's terminal block as shown below. The brown wire can be connected for either 240V output or 208V output. Note: the desired output voltage MUST match the SmartOnline's output voltage. (See SmartOnline Owner's Manual.)

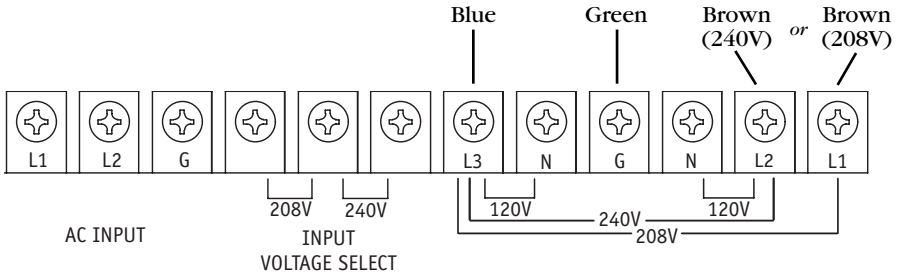


Copyright ©2003 Tripp Lite. All rights reserved. SmartOnline™ is a trademark of Tripp Lite.